



HEIGHT ADJUSTABLE ERROR CODE INSTRUCTIONS

E01	Leg Malfunction	1. Leg(s) are loose from the control box. Check cable connection, ensure legs are connected correctly.
E02	Changing positions too often	1. Allow the table to cool down. Stop using the switch, let system cool down for 10 minutes
E03	Table top overload	1. Remove weight from table top.
E04	Control box malfunction	1. Unplug for 5 mins. 2. Run Initialization steps again.
E05	Stuck switch button	1. Check the status of the button , if stuck then toggle back to reset into neutral position.
E06	Communication disconnected	1. Check for disconnection between switch and control box, ensure connection is fastened correctly.



1. E01/E02/E03 error code needs control box continue sending the command.
2. E05 standard, switch to detect the input value is the same for 30 seconds, display E05 on screen.
3. E06 standard, switch cannot receive data for 5 seconds, display E06 on the screen.